




# PRODUCT SHEET

Date of issue: 10/07/23

**ALPHA 0806732** - collection + storage + soaking with Click Safe system

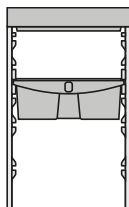

Click Safe system requires the use of the corresponding Click Safe folding mop holder (See the catalog under the line Soaking and Floor Washing Systems - system with pockets)

## APPLICATIONS

Trolley used for the waste collection, for the wet mopping and/or disinfection in hospitals, rest homes, clinics, medical practices, with mop soaking system on demand: the innovative Equodose® mechanical dosing device (to order separately) and Click Safe touchless mop release system.

## ECO BOX



### COMPLIES WITH THE EUROPEAN GPP GUIDELINES ON THE USE OF ENVIRONMENTALLY FRIENDLY PRODUCTS IN PUBLIC ADMINISTRATIONS

The soaking system directly on site, trolley equipped with Equodose, prevents the operators from deciding the soaking degree of the mops at their discretion and guarantees the maximum efficiency in the water and chemical consumption

Manufactured with repairable components and / or available as spare parts, to ensure a long life cycle



### PSV PRODUCT

Product partially made of PSV certified plastic components - Plastic Second Life: the first Italian and European brand of environmental product certification that guarantees and makes it easier to identify goods obtained using recycled plastics



### CARBON FOOTPRINT

Filmop is certified according to the Carbon Footprint Systematic Approach, carried out in compliance with the UNI EN ISO 14067:2018 standard, which allows to quantify the environmental impact of the product expressed in CO<sub>2</sub> emitted at each stage of the life cycle



### ECO-FRIENDLY PRODUCT

Product made of separable materials and, consequently, recyclable at the end of its life

Product sold in packaging compliant with Legislative Decree 116 of 03-09-2020 concerning the obligation of environmental labeling for correct disposal at the end of use. 99% of the cardboard packaging used by the company is made on average with 80% recycled paper

Disclaimer: Filmop International Srl reserves the right to update the contents of this document at any time and without notice.

# PRODUCT SHEET

Date of issue: 10/07/23

## FEATURES

- Made of high quality polypropylene copolymer: light, shock-proof, heavy duty and low-temperature resistant
- Strong, tough, ergonomic, modular, easy to assemble and clean
- The Equodose® dosing system allows to soak on demand and directly on site just the necessary mops that will be ready to use in a few and simple steps
- Click Safe touchless system that allows the mops to be released directly into the bucket without any contact and no bending by the operator
- The base can be equipped with an additional fifth wheel in the middle to be much stronger in case of a heavy loaded trolley
- Its vertical frames guarantee the maximum hygiene, being the trash bag always separated from the rest of the trolley
- Bagholder 2x75 L for the collection of dirty mops and cloths equipped with ergonomic push-bar, handle supports and hook. It is available in different versions: 150 L, 2x75 L, 1x50 L+1x100 L, 3x50 L and it is equipped with 2 shock absorbing pistons for a silent and soft closure of the cover (Hush System).
- The bagholder is completely closed for a better hygiene and the door helps the operator while emptying the bag from the front
- The bagholder can be equipped by a kit pedal which allows the opening of the cover by foot, without using the operator's hands
- The central basket has a label which can be customized writing the operator's name, the working area or other useful information
- Buckets 4 L in different colours to separate the different chemical solutions, tools and cleaning equipment in use
- Door for central storage compartment equipped with removable key and grip with key compartment
- The fixed side walls and the side doors are completely smooth and upon request, they can be customized with drawings, pictures or logo
- Several combinations of shelves and drawers are available: drawers 10 L, 22 L, 40 L, equipped with slide out limiter, with or without lock
- The trolley can be equipped with hooks, baskets with dividers, carry baskets, handle holders and many other accessories: we suggest you to check our technical catalogue in the "components and accessories" section of our Alpha line of trolleys in order to know the complete range of the available accessories.
- Latex-free product

## MATERIAL

Polypropylene copolymer

| REF.                 | NET WEIGHT<br>(kg) | SIZE (cm)<br>↓ ↓ ↓ | PCK | VOLUME<br>(m³) | GROSS WEIGHT<br>(kg) |
|----------------------|--------------------|--------------------|-----|----------------|----------------------|
| <b>MA0806732UD00</b> | 31,2               | 141x58x120         | 1   | 0,488          | 32,84                |

|             |   |       |
|-------------|---|-------|
| 0000SE0104A | Blue plastic bucket 4 L with plastic handle   | 1 pc. |
| 0000SE0104B | Red plastic bucket 4 L with plastic handle  | 1 pc. |
| 0000SE0104C | Yellow plastic bucket 4 L with plastic handle   | 1 pc. |
| 0000SE0104F | Green plastic bucket 4 L with plastic handle  | 1 pc. |
| 0000SE1222B | Red plastic bucket 20 L with plastic handle   | 1 pc. |
| 0000SM00165 | Set of T-shaped light grey closing plugs for vertical frames (6 pcs)  | 2 pcs |
| 3048        | Set of 3 stickers for buckets   | 1 pc. |
| P066061U    | Long base with wheels ø 125 mm  | 1 pc. |
| P1229906U   | Grey plastic drawer 22 L without key  | 1 pc. |
| P190360U    | Plastic cover for Click Safe system   | 1 pc. |
| P2039908E   | Vertical frame 1 side with slides + 1 side T-plugs with reinforcements, screws and plugs  | 2 pcs |
| P2199906U   | Central plastic basket (female-female version) with plugs   | 1 pc. |
| P2909912U   | Divider for bag holder 150 L  | 1 pc. |
| P2909920U   | Closing profile for central basket and central bag holder, with screws and plugs  | 1 pc. |
| P2909946A   | Blue cover for bag holder 150 L with check list holder  | 1 pc. |
| P3059953E   | Fixed side wall with fixing pins  | 3 pcs |
| P3059954E   | Right door with fixing pins   | 1 pc. |
| P3909952E   | Door with fixing pins for bag holder  | 1 pc. |
| P8169905U   | 150-liter bag holder for Alpha standard and 90-liter for Alpha with Split system, male version, with hooks, pistons, screws and plugs | 1 pc. |
| R2200045    | Rilsan coated bucket holder with ø 80 mm wheel for Top-Down   | 1 pc. |

Disclaimer: Filmop International Srl reserves the right to update the contents of this document at any time and without notice.

# PRODUCT SHEET

Date of issue: 10/07/23

## ACCESSORIES TO ORDER AS SEPARATE ITEMS

|             |  |       |
|-------------|--|-------|
| 0000AT0160A | Plastified bag 56x92 cm, capacity 80 L, blu  | 1 pc. |
| 0000AT0160B | Plastified bag 56x92 cm, capacity 80 L, red  | 1 pc. |
| P2909962U   | Pedal kit for Alpha trolleys with large, mini or supporting plate, 150 lt bag holder and ø 125 mm wheels | 1 pc. |
| P320100UA   | EQUODOSE - dosing device with one tank 6L for mop soaking on demand, with EPDM washers                   | 1 pc. |

## ON REQUEST, WITH SURCHARGE



Rubber wheels ø 125 mm

**TROLLEY REF.**  
MA0803709UD14



Wheels ø 100 mm

**TROLLEY REF.**  
MA0801709UD14



Bag holder with adjustable push-grip

**TROLLEY REF.**  
MA0806759UD14

## RELATED PRODUCTS



**CLICK SAFE** - plastic foldable mop holder with ErgoSwing fitting



Mesh bag with closing string

## GENERAL PRODUCT SAFETY

The products sold by us do not need a product certification, as they are in compliance with the definition in Legislative Decree 206 of 06.09.2005

## DECLARATION OF CONFORMITY

All the products sold by us are in compliance with the laws in force regarding safety and are covered by an insurance policy "Civil responsibility for products"